

## Digital TV Converter Box to get Channel17 up

(If your TV is more than five years old you may need to buy this box)



**ZJBOX**

**Digital Converter Box**

Here is the link to Buy the Digital TV Converter

[https://www.amazon.com/dp/B07Z5RGLK6?psc=1&ref=ppx\\_yo2ov\\_dt\\_b\\_product\\_details](https://www.amazon.com/dp/B07Z5RGLK6?psc=1&ref=ppx_yo2ov_dt_b_product_details),

(This device comes with a Remote, HDMI cable and a power cable.)

### Setup Steps to follows:

- ❖ Plug the power cable to a power outlet
- ❖ Connect Dish Cable to the RF IN port (back of the Box)
- ❖ Connect HDMI cable from TV to the Box
- ❖ Turn on both the TV and the Box using remotes
- ❖ (Make sure you select the right HDMI1 or HDMI2 or HDMI3 source before start searching the channels from the source button on your TV Remote)
- ❖ Turn on the Box using the **Remote**
- ❖ Select **Cable** from the menu and start searching for channels

(After completed searching you should be able to get all channels provided by Dish cable)

**Note: If you use this Box then Dish TV Guide will be on Channel 71**

**Feel free to contact Channel17 office/Dish office if you need further assistance.**